

CANONICAL



Ubuntu on Intel IoT

2022-11-15 Release Notes

Images: Ubuntu 22.04 Intel Desktop and Ubuntu 22.04 Intel Server

Kernel: Intel IOT 5.15

Release Date: 2022-11-15

Version: 1.1 (last updated: 2022-11-30)

Purpose of Release

This release of the images is based upon Ubuntu Desktop 22.04 and Ubuntu Server 22.04. All release assets are provided by Canonical.

Images

- Ubuntu 22.04 Desktop: [Ubuntu for Intel IoT](#) webpage.
 - Image SHA256SUM:
76e85a9b4469a2978e46929c4efefd649bab341cd18f5b1ad156366e68fc4935
- Ubuntu 22.04 Server: [Ubuntu for Intel IoT](#) webpage.
 - Image SHA256SUM:
e66be61f9746e9b16f561a74fc9280d4e7503fb0d57cc5c62b68f65efd08b18a

Hardware Platforms Tested During CQA

- Aaeon EHL (UPN)
- Aaeon TGL (Up-Xtreme i11 UPX)
- Aaeon ADL-S
- ADL-P CDB
- ICL-D LLC

Bugs Fixed

Canonical CQA Verified:

- [LP#1978468](#) [iotg][aaeon-ehl][aaeon-tgl] 20.04LTS desktop does not boot
- [LP#1979944](#) [iotg][ehl][tgl][aaeon-ehl] stress-ng-test-for-class-os fails in Desktop & Server Stress test
- [LP#1981971](#) [IOTG][EHL][ICL-D] Gstreamer media failures on Ubuntu 20.04 Desktop Alpha Image
- [LP#1972136](#) [iotg][22.04LTS][server][CBRD] call trace message for dwmac_intel module.
- [LP#1962102](#) [iotg][adl-p] System freeze after running CPU or Memory stress test
- [LP#1964743](#) [TGL] EDAC support OOT patches

Tested through other means:

For example, hardware might be tested by an external partner or using hardware that is not used in CQA testing.

- [LP#1937146](#) Intel EHL board does not see all three ethernet interfaces
- [LP#1987049](#) LAN devices are not visible after suspend, resume and appear only after driver is reloaded

Known Limitations

- [LP#1961130](#) [EHL][TGL][ADL] Enable libbpf on 20.04 (focal)
 - Implemented but currently untested.
- [LP#1981392](#) [iotg][adl-p][22.04] Detect Wireless test failed with No Devices Detected
 - With upgrade to 5.15 and corresponding ucode 66 the wireless no longer works for AX210 (subsystem id 8086:6020). A fix is in progress and will be rolled out when resolved. In the interim the desktop and server systems can be updated through the apt command and it's in [Ubuntu Wiki](#).

Open Bugs

Open bugs can be found [here](#).

Report Bugs

Report bugs [here](#).

Intel Board BIOS Settings

Ubuntu Desktop: Default BIOS settings are sufficient in most instances. Some features on Elkhart Lake, like QEP, USB-DWCS, require BIOS settings or they will not work. Note: Enabling USB-DW3 will affect the functionality of the USB-C port.

Ubuntu Server: Default BIOS settings are sufficient.

Some users have reported being unable to enter the BIOS settings (F2) or the Boot Manager (F7) when a USB drive is inserted. This can make it difficult to boot from a USB drive when installing the Canonical images. To get around this, boot the system without any USB drives inserted. Enter the BIOS settings, insert the drive, and then select Boot Manager. The USB drive will show up in the list so users can select to boot from it.